


What is the suspension ride height?



On an air suspension Ride Height is the distance from the centre of the axle to the underside of chassis. With Air Suspension this height is the same whether laden or unladen.

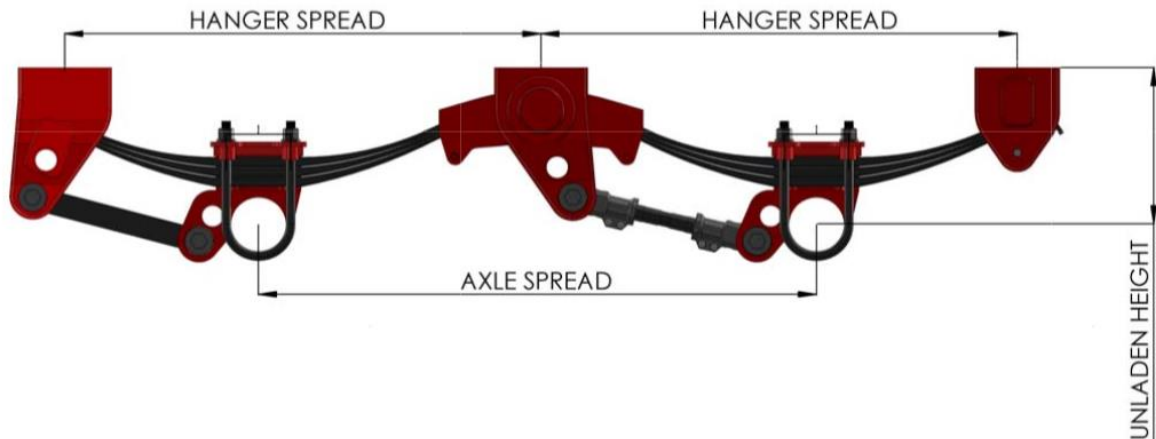

On a mechanical suspension the ride height is the distance from the centre of the axle to the underside of the chassis but the height is different if the suspension is laden or unladen as the mechanical spring deflects with weight.

